NO.:088-MTK6200-000-00A

RM

Roadmaster

RM-Y100 BT

Multi Media Car Stereo System

INSTRUCTION MANUAL

BLUETOOTH/TV/DISC

Some functions in the user manual are optional.
Please refer to the real model in actual use.

Capability

FM

Frequency Range 87.5-108.0MHz

Intermediate Frequency..... 10.7MHz

AM

Frequency Range 522-1620KHz

ntermediate Frequency..... 450KHz

TFT LCD Monitor

LCD Monitor ..... 6.2 inch（Diagonal）

Screen Size .....154.4(W)¡ 92.6(HÁ 5.90(D) MM

LCD Dimension ..... 480X(R,G,B)X234 dot

Display Area .....137.52(W) ˆ 77.22(V) MM

NOTICE: The specification and design of this product are subject to changes without prior notice.

Steering Wheel Operation(626、627、628)

Touch a point(Pic B)before entering DVD interface. When touch screen interface show up, press 8888 on the numeric buttons. When Steering Wheel Setup & Quit shows on the screen(Pic C) shows, steering wheel setup will beentered. Press one of the buttons on the steering wheel and hold it, then press any setup button on remote control/panel(Pic A) A toot shows that the setup isdone. Press Quit button to exit.

For example: If you want to modify the volume on steering wheel, press one of the buttons on the steering wheel and hold it, then press '+' on panel/remotecontrol. A toot shows that the setup is done.
Note: One of the buttons on steering wheel is corresponding to one of those onpanel/remote control(only the alterable buttons)

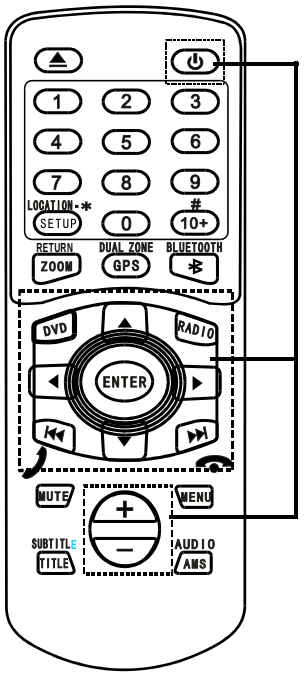

alterable buttons

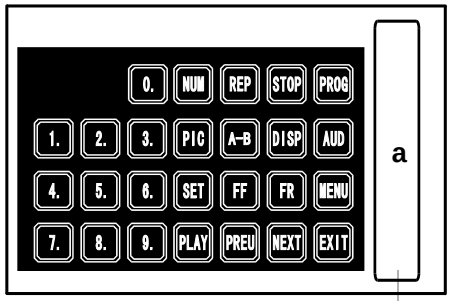

PicB

A

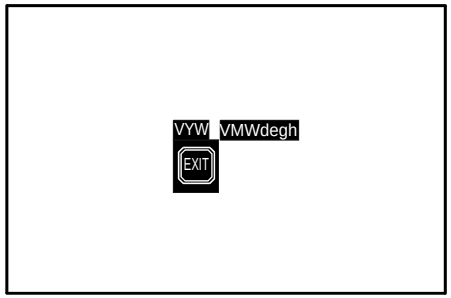

PicC

PicA

Contents

Contents.....1
Notice.....2-3
User Guide.....3-4
Use & Maitenance for Remote Control.....5
Disc Handling and Maintenance.....6
Playable Disc.....7
Panel's Diagram.....8
Remote Control's Diagram.....9
Key-press Instructions.....10-13
Touch Screen Operations.....14-36
Troubleshooting.....37-38
Installation.....39
Steering Wheel Operation.....40
Capability & Specifications.....41

Welcome using series car audio products. Pleasecarefully read our user manual before installing and using our products. Plesekeep the manual well for your reference.

Notice

Important prevention measure

Please read the entire instruction Manual about your monitor and preserve properly it, by win prepare later to consult.

1. Before operating this monitor , please read this instruction manual carefully.
2. Please preserve the instruction manual in convenient place, in order to consult sequence of operation and security information.
3. Please pay more attention to the instruction manual each warning, and strictly carries on the operation according to the instruction.
4. Other people except have read and grasped the operation explanation, otherwise, do not let him use this system.
5. Do not install the monitor in which may cause:
   A. Block off the driver's sightline.
   B. Affects the vehicles any operating system or the security function performance (including the button of the security aerocyst and caution light), or interrupts the driver safe driving the position.
6. If operates this monitor to disperse your attention. Causes you are unable to drive vehicles safely. Please observe the safe driving rule and pay attention to all present traffic regulations, if you are operating system or reading the display in trouble. Please park your car safely, then make with the necessary ajudgement.
7. Please remember to tie the safety belt when you driving, otherwise, if the accident has happened. The injured degree will intensify.
8. Do not wear the earphone when you driving.
9. To ensure safety. Do not use some function when the brake is pulled up and the vehicle is driving.
10. Do not turn up the volume too high. You can't hear the outer activity.

⚠ CAUTION

- Don't try installing or repairing your monitor . If you have no training about electronic setup and car fittings, and who have no relational experiences. You will be injured by electric shock or other danger.

Installation（626、627、628）

CAUTION:

1. Always use an experienced installation technician.
2. The location of the player must not obstruct the driver .
3. Do not install the player in excessive dusty, shakable, high-temperature or humid condition.
   Note : these conditions will adversely affect the player's operation.
4. Follow the player connecting diagram, using the appendixes provided with the unit.

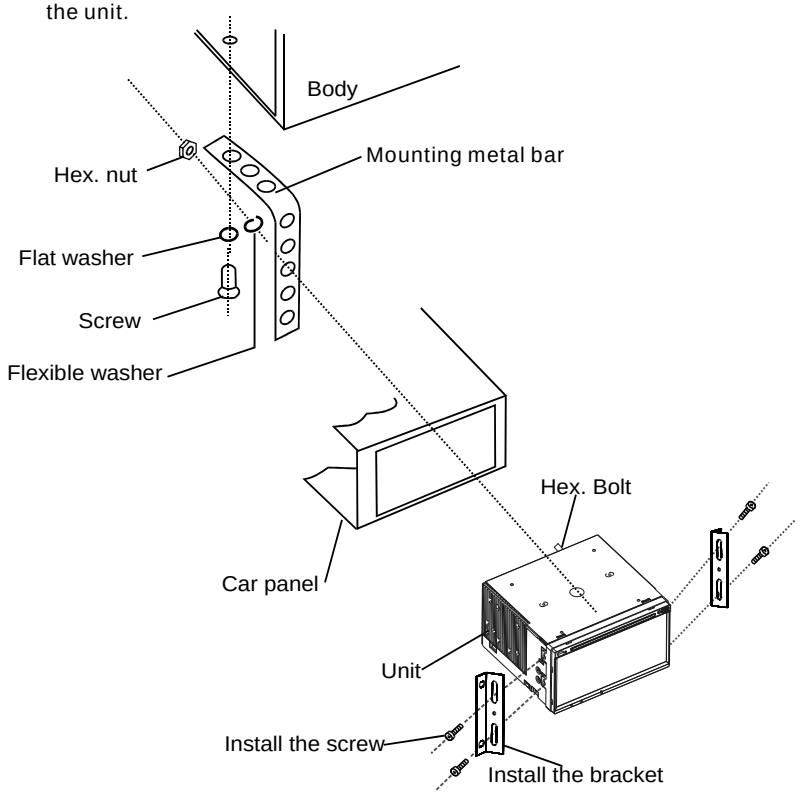

Troubleshooting

The troubles in DVD playing

Trouble	Reason	Measure
Fails to dialogue language and subtitle language	The playing DVD has not multi-lingual record content.	If the disc does not record muti-lingual, you will not switch it.
	You have to switch in the item of the disc menu.	If the disc has not record subtitle. The subtitle can't display.
Do not display the subtitle	The playing DVD has no subtitle.	If the disc has not record subtitle. The subtitle can'tdisplay.
	You only switch in display items of the disc menu.	Use the disc menu to switch.
Fails to accord to D/K mode in DVD SETUP to carry out playing.	The playing DVD has not multi-lingual record content.	If the disc has not record the selecting language in DVD SETUP. It can't switch to selecting language.
Fails to switch angle	The playing DVD has not shoot scene which from multi-angle.	If the DVD has not record the scent from multi-angle, you will not switch in multi-angle.
	You are trying to multi-angle watch scene which has not shoot from milti-angle.	Watch the record scene from multi-angle shoot to switch in multi-angle.
The picture unclear / Distortion & Dark.	The disc has signal which forbid copy. (Some may have this signal.)	Because of the unit compatible duplication system. Therefore, when play the disc which has forbid copying signal, the image can watch when certain display monitors appear the horizontal stripe or oder flaws.

The troubles in VCD playing

Trouble	Reason	Measure
PBC (play control) menu display will not be searched out.	The playing VCD has no PBC.	The VCD without PBC can not carry out this operation.
Fails to repeat & track and time searching.	The playing VCD has PBC.	The VCD with PBC can not carry out this operation.

Notice

⚠ CAUTION

- In order to avoid the accident and break the relational law. Do not use the display monitor which the driver can be watching with this unit.
- In order to avoid the accident has happened, and break the relational law. Do not use the front DVD or TV function when driving, and the back monitor should not install it in which separate the driver's attention.
- In some country or states, even if the driver or others, watching image from the monitor will break the law. In similar area, must keep the rules and do not use the DVD function.

⚠ CAUTION

Do not install the vehicles which have no ACC function.

User Guide

About unit

⚠ Notice

A. This unit is used at the 13.8V DC ground. In the condition of the negative ground connect with the metal body of car, so it is safe to operate.
B. Fix the unit in the steady parts. If you parked your car to direct the sunlight wait until the temperature in the car becomes normally before operating the unit.
C. If this unit is out of order. Please shut off the power sources immediately and contact with authorized repairman in time. Do not disassemble it by yourself.
D. Please forgive us that we are irresponsible for the damages by your own defect.

Protect LCD monitor

When this unit does not use in long time. Do not expose the LCD monitor to direct sunlight. Otherwise, it will cause the function out of gear.When use the mobile phone, please keep away from the monitor, so that video sign al was interrupted decause of spot, color stripe, etc.

User Guide

⚠ Notice

A. When your hands have sweat, water.
B. When your hands have dirt.
Do not touch the monitor to avoid it was damaged and cause the operating can't control.

RESET MPU

Press 'RESET' button to reset MPU to default MPU must reset as following situation:

- When finished the installation before use this unit first.
- If this unit can't operate normally.
- When the monitor appears exceptionally or the error message.

1. Turn off the Ignition switch.
2. Use the pen point or other edgily tools to press.

Car back video input function

This unit includes car back video input function. (When car back camera connects this player), during the operation of car backing, this player changes from play mode to car back video input mode automatically. Then the screen shows you back view, it protects you more safely.

Note: Maybe some camera lens can't match with this monitor,so it will app ear horizontal line on picture.Only need press ‘9P/N’ button over 2 seconds on remote control to set system match in 3 seconds,then solve this question.

Troubleshooting

Common Trouble

Trouble	Reason	Measure
The power fails to put through the unit does not work	The down-lead and tie-in has disconnected.	Please check whether the power has been connected correctly.
	Fuse broke off.	Removes reason which the fuse broke off, then chang the fuse. For god's sake to install the right same tating fuse.
	The noise and other factor caused the Built-in MPU fails to work normally.	Press 'RESET' button.
No sound	The wire has discconnected.	Connect the wire correctly.
	The unit enforcing the play with repose, slow motion or per frame to play.	Enforce the repose, slow motion or per frame to play has no sound.
No picture	The grip brake wire has disconnected.	Connect the grip brak wrie, then pull it up.
	The grip brake has not pulled up.	Connect the grip brak wrie, then pull it up.
Icon ⃠ display, the operation is unable to carry on	The disc forbid operating.	The operation is unable to cany on.
	This operation's structure with the disc do not compatible.	The operation is unable to cany on.
Audio and video leap	The unit installed loose.	Fix the unit steadily.
Touch screen can't operate normally by tiuching	Built-in MPU is unable to normal work.	After launder the operations normally.
The remote control does not work	The remote control does not aim at its receiver window.	The remote control aimed its receive window.
	The battery of remote control die down.	Please use new battery instead.
Fail to reset tune in radio mode.		Radio signal too low to store the correct frequenly into the storage.

Touch Screen Operations

1、In audio balance interface,touch ‘ / ’ to adjust the balance of LF , RF, LR,RR rangingfrom 0 to 20 .

2、Touch ‘ ’ to quit and back to setup interface.

L、 ‘ ’ Press this button to enter GPS interface.(See details inNavig ation & map user manual. The GPS function has been built in the model.

Press ‘MENU’ to exit or change to other modes.

Touch Screen Adjustment

To set this button when touch screen working has warp, in order to setup accurately, you can choose pointed tools(but do not damage the screen surface) to operate.Touch ‘⊕’ in Pic 9 and four ‘⊕’ will be shown as Pic 9. According to the sequence of the pictures, touch ‘⊕’ until the forth has been touched. Theadjustment has been finished.

（Note: While making the adjustment for the touch screen, point at the centre of “⊕” and do not touch other position. Otherwise, it will not be effective or incline.）

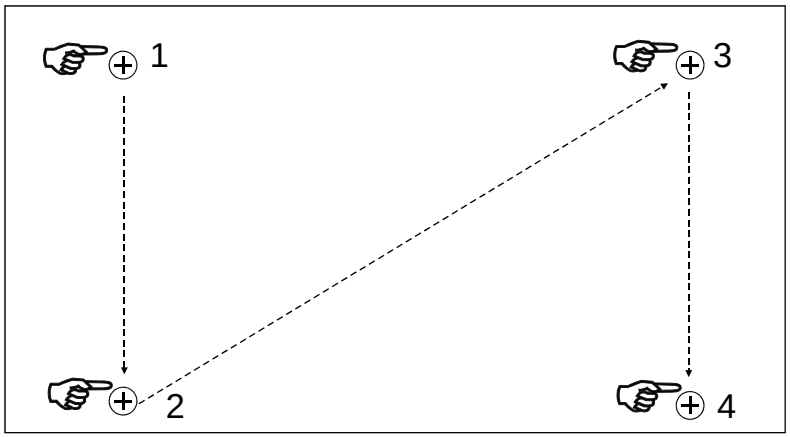

(Pic 9)

* **Note:**

The product can not be adjusted any more after leaving factory because of all of products were adjusted in production.

Use & Maitenance for Remote Control

Install battery

Slide out the battery seat from the back of remote control, then according to anode and negative direction to insert the battery.

When use it first. Please pull out film which the battery protrudes.

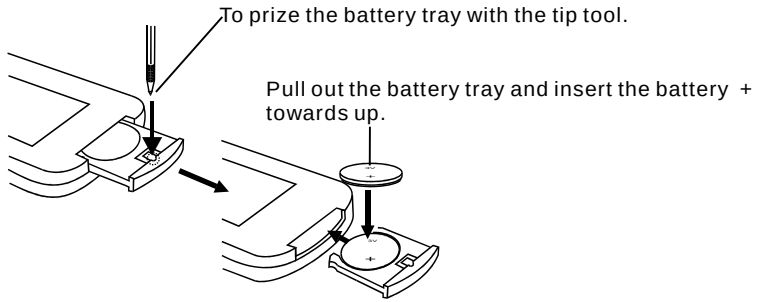

After installed the battery to push back the tray.

⚠ CAUTION

Please keep the battery away from the children. If the battery was pushed back by him. Please see a doctor at once.

⚠ CAUTION

- Only use a 3V lithium battery.
- The remote control does not use in one month at least, please take out the battery.
- Do not electricize to the battery, tears down, heats up or abandons it in the fire.
- Do not operate the battery with metal tool.
- Do not store the battery with metal material.
- If the battery leak liquid, please wipe it off and install the new battery.
- Deal with the used battery. To obey the local government laws and regulations of your country or the environment public organization's rules.

Use remote control

The remote control operation aimed the front panel. The remote control can't work normally to direct the sunlight.

⚠ CAUTION

Do not keep the remote control to direct the high temperature or sunlight.

Do not keep the remote control falling the floor. So that it was clipped in below of the brake or gun.

Disc Handling And Maintenance

Disc Using

1 To keep the disc clean, please hold the disc edge only, do not touch its surface.

2 Do not stick the label or adhere things on the disc.

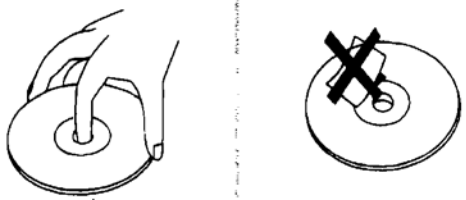

Correct

Incorrect

3 Do not expose the disc into direct sunshine or near the hot sources.

4 After playing, please store it into the disc box.

Disc Cleaning

1 Before playing, wipe the disc with a clean cloth, from the centre hole towards the outer edge .

2 Never use alcohol, thinner, cleaning fluid, static electricity prevention liquids or any other solvent to clean discs.

Disc Storing

After playing, please store the disc into the disc box and keep them in room temperature. It can help to extend the using life of the disc effectively.

Touch Screen Operations

Note:The brightness, contrast, colour can not be changed in Standard Mode, Soft Mode, and Bright Mode. They can only be change in Customised Mode.

3、Touch ‘ ’ to exit and back to setup interface.

C、 Touch ‘ ’ to enter audio setup interface. Pic8-3

Pic8-3

1、There are 4 kinds of modes in audio modes: Rock, Jazz, Standard, Classic.

2、Press ‘ ’ to adjust loudness, treble, dediant, and bass ranging from 0 to 16. Karaoke mode can not be adjusted.

3、Touch ‘ ’ to quit and back to setup interface.

D、 Touch ‘ ’ enter audio banlance interface.Pic8-4

(Pic8-4)

Touch Screen Operations

A、 Touch ‘ SYSTEM ’ to enter system setup interface。 Pic8-1

（Pic8-1）

1、Touch ‘ ON ’ and then ‘ ▲ / ▼ ’ to adjust the clock. Touch ‘ SAVE ’ to see the data in column

2、Touch ON / OFF To turn on/ off the buzzer / car reverse.

3、Touch ‘ ↙ ’ to quit system setup and back to setup interface.

B、 Touch ‘ DISPLAY ’ to enter display setup interface. Pic8-2

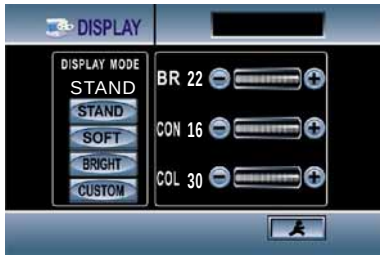

(Pic8-2)

1、In display mode, there are 4 kinds of modes: Standard, Soft, Bright, Customised

2、Touch one of the modes and Brightness, Contrast, Colour will be shown in the column.

Playable Disc

This unit can play DVD, S-VCD, VCD, CD, MP3, MP4 etc. format discs.

Disc types	Disc symbols	Recorded Contents	Disc Sizes	Playing time
DVD	DVD VIDEO	Audio+Video (Motion Picture)	12cm	About 2 hours (single side disc) About 4 hours (double sides disc)
S-VCD	SVCD	Audio+Video (Motion Picture)	12cm	About 45 minutes
VCD	COMPACT disc DIGITAL VIDEO	Audio+Video (Motion Picture)	12cm	About 74 minutes
CD	COMPACT disc DIGITAL AUDIO	Audio	12cm	About 74 minutes
MP3		Audio	12cm	About 600 minutes
MP4		Audio+Video compressed format	12cm	

NOTICE:
Some DVD, S-VCD, VCD discs playing operation may be limited by the soft ware designer s special regulation, please refer to the instruction manual of disc. This unit can play recorded discs (CD-R,CD-RW) too, but it depends on the quality and recorded situation, some kinds of discs can not play in this unit.

PAY ATTENTION :
This player cannot playback diameter 8cm disc. To avoid damage of it, please do not insert and play the above mentioned disc in this player.

Panel ‘ s Diagram

6200 TOYOTA YARIS

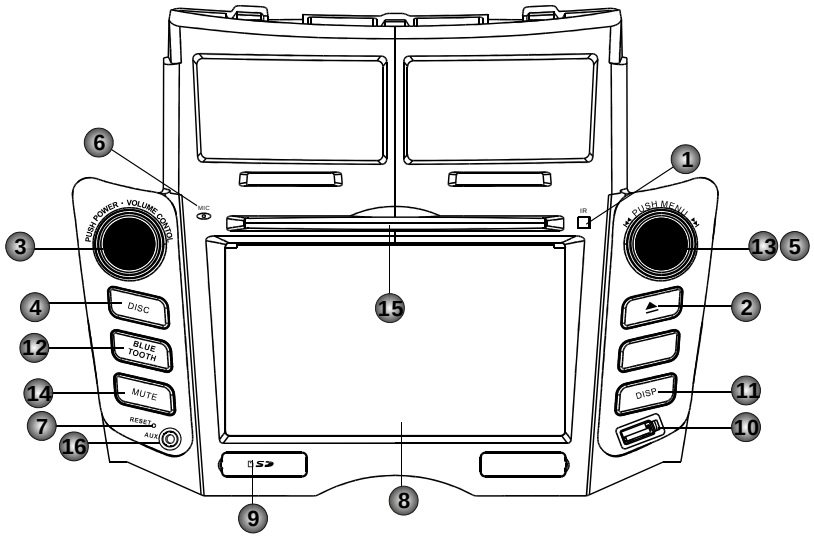

1.Remote control receiver

2. Disc eject button

3. Volume +/-;Power on/off

4. Disc

5.Menu

6.Bluetooth MIC

7. Reset button

8. Monitor

9.SD card slot

10.USB port

11. Monitor on/off

12. Bluetooth

13.Radio searching down/DVD /last track /TV channel search forward/fast-backward;Radio searching up/DVD/next track/ TV channel search backward/ fast-forward:Menu/Enter/Power

14. Mute

15. Disc slot

16.Audio input/AV Input

Touch Screen Operations

K、Setup Interface Introduction Pic8

Touch ‘ SETUP ’ to enter setup operation interface. Pic8

(Pic8)

A、Touch ‘ SYSTEM ’ to enter system setup.(Pic8-1)

B、Touch ‘ DISPLAY ’ to display setup interface.（Pic8-2）

C、Touch ‘ BALANCE ’ to enter audio balance interface.（Pic8-3）

D、Touch ‘ MAIN ’ to enter main menu interface.（Pic1）

E、Touch ‘ EXIT ’ back to playback/radio interface（default goes back to radio interface. P4）

F、Touch ‘ BKG SRC ’ to enter background setup.（not available）

G、Touch ‘ VERIFY ’ to enter touch screen adjusting interface.

H、Touch ‘ EQ ’ to enter DSP audio interface.

Touch Screen Operations（7010、6208）

J、 ‘ ’ Touch this button to enter Changer Mode interface as Pic 7 shows:

（Pic 7）

1. ‘ ’ Touch this button for the previous disc.

2. ‘ ’ Touch this button for the next disc.

3. ‘ ’ Pause button. Press this button for pause.

4. ‘ ’ Press this button for the next track.

5. ‘ ’ Press this button for the previous track.

6 ‘ ’ Press this button to adjust the volume.

7 ‘ ’ Press this button for mute.

8 ‘ ’ Press this button to quit the system setup and back to the main menu interface.

9 ‘ ’ Disc playing time display

10 ‘ ’ Disc playing order display

Remote Contorl’s Diagram

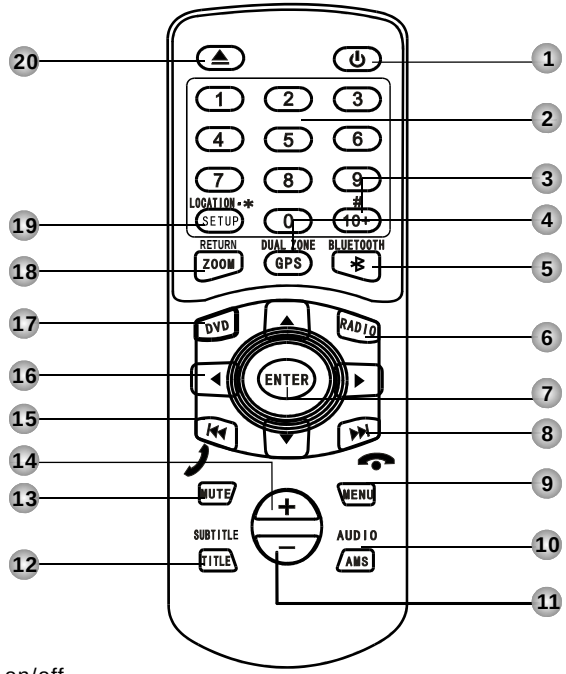

1、Power on/off
2、Numeric button
3、Number 10+/# button
4、 GPS&Audio/Video synchro;
DUAL ZONE=listen music
or radio while using GPS
5、Bluetooth (The optional function operation)
6、Radio
7、Enter
8、Radio searching up/next track
/fastforward&TV channel
searching back/bluetooth hangup
9、Menu
10、Auto-memory&search&storage
/tracksearching/title/audio channel
/program
11、Volume down
12、Title/subtitle
13、Mute
14、Volume up
15、Radio searching down/previous
track/backward&TV channel
searching up/bluetooth answer
calls
16、Direction ▲、▼ 、◀ 、▶
17、Pause
18、Zoom out
19、Setup/location(GPS)/*button
20、Disc eject button

Key-press Instructions

Disc Eject Button(⏏)

In playing mode, press ‘⏏’ on panel to eject the disc. When the disc is still inside,press it again to make the disc in and play. If the disc stays about 10 seconds after ejecting,it will return to the slot automatically, but not playing. Otherwise, press DVD shortcut button or Menu button to enter the menu.

Radio shortcut button

In standby state, press this button on panel/'Radio'button on remote control to enter radio mode.

Volume button（VOL+/-）Power on/off button (⏻)

In standby state, press ‘+/-’ on panel/remote control to adjust the volume. Press this button on panel to turn on/off the unit.

DVD Shortcut Button

In working state, touch this button to enter DVD playback interface.

Menu Button

In standby state, press this button on panel to enter the touch screen main menu interface.

Auto-memory&Scan Storage Button

1、In radio mode, press ‘SCAN’ on remote control or ‘Search’ button on panel for the player will search six strongest stations automatically and and stored from NO.1-6 into memory stick. FM has 3 bands as FM1, Fm2, FM3Each band can store 6 stations and 18 ones can be stored totally. AM has 3bands as AM1, AM2,AM3 .Each band can store 6 stations and 18 ones can be stored totally.

2、In TV mode, press it for over 2 secretary for auto search & storage.
(The optional function operation)

Reset Button

Press this button on panel to reset.

Touch Screen Operations

(Pic6-4)

(1)、Display column. It shows the dialed, answered, missed calls or chosen dialed,answered, missed calls.

(2)、It records the dialed, answered, missed calls numbers.Touch ‘ / ’ to choose the number.

6、Touch ‘ ’ to quit .

F, ‘ CAMERA ’ This unit has rear camera function.(If the rear camera has been connected with this unit) When the unit is working, push reverse. It will switch to rear camera mode. The scene shot by the camera can be shown on the monitor.

H, ‘ AV IN ’ Press this button to enter AV IN mode. In this mode, touch Setup to enter setup interface. Touch quit to enter main menu interface.

I、‘ IPOD ’ Touch this button to enter IPOD mode.(not available)

Touch Screen Operations

(1)、Dial numbers through the cellphone or the numeric buttons on panel.
(2)、Touch numeric buttons on panel to dial the number. The number will be shown in the column. Touch ‘ C ’ to deleate one by one or deleate all by long-press.
(3)、Touch ‘ ’ to make the call after dialing the number. Touch ‘ ’ to hang up.
(4)、During calling, touch ‘ TRANS ’ to switch between the car’s speaker and the phone.
(5)、 ‘ / ’ Touch this button to adjust the volume.

4、Answering Pic6-3

（**Pic6-3**）

(1)、When there is a call incoming, it will switch to bluetooth hand-free interface from any mode. The original playback voice will switch to the cellphone ring.
(2)、Touch ‘ ’ or ‘ ’ to answer or refuse. If the model has been set ‘**ANSWER**’, the calls will be connected automatically after ringing 3 times.The incoming Tel number will be shown in the column.
(3)、During calling, touch ‘ TRANS ’ to switch between the car’s speaker and the phone.

5、Touch ‘ ’ to enter calling record interface. Pic6-4

Key-press Instructions

USB Function

1. Insert the USB into the USB port, the player will automatically playback the contents of USB. Press 'MENU' button on panel to enter main menu and touch USB/SD to enter. Touch the tracks on screen to playback.
2. Press 'MENU' button on panel to enter main menu and choose other playback modes.

Note: USB supports to play MP3、DVD、CD、AVI、WMA、JPG, 1.1、2.0 full speed、2G，4G、8G, with not more than 300 grates for the folder, each grate not exceeding 500 documents.

Monitor off（ ）

Touch Monitor on/offbutton panel to turn on/off the monitor.

TV Shortcut Button

In working state, press this button on panel to enter TV interface.

Bluetooth Shortcut Button

In working state, press this button to enter bluetooth interface.
(The optional function operation)

Radio searching down/DVD/last track/TV channel search forward/fast-backward(⏮)

1、In radio mode, Press ⏮ on panel/remote control to adjust the receiver frequency down. Press and hold it for over 2 seconds to search down automatically.
2、 In disc playing mode, Press ⏮ to select the last track.
3、In TV mode, press ⏮ button once to skip previous a channel, press this button over 2 seconds to search up automatically and play the searching stations. (The optional function operation)
4、 In disc playing mode, press this button over 2 seconds to select fast-backward as following: fast backward X2, X4, X8 ,X16 playing.
5、In bluetooth mode ,press this button on remote control to answer the call.
(The optional function operation)

Key-press Instructions

Radio Searching up/DVD/Next Track/TV Channel Search Backward/ Fast-forward(⏭)

1、In radio mode, Press ⏭ on panel/remote control to adjust the receiver frequency up. Press and hold it for over 2 seconds to search up automatically.

2、In disc playing mode, Press ⏭ to select the next track.

3、In TV mode, press ⏭ button once to skip previous a channel, press this button over 2 seconds to search up automatically and play the searching stations. (The optional function operation)

4、In disc playing mode, press this button over 2 seconds to select fast-forward as following: fast forward X2, X4, X8 ,X16 playing.

5、In bluetooth mode ,press this button on remote control to hangup. (The optional function operation)

GPS&Audio/Video Synchro

1.In working state, press this button to enter GPS&audio/vedio synchro

（1）GPS&audio: In audio/radio/TV mode, press GPS button on panel/ remote control to enter GPS interface with the above mentioned mode. When there is voice coming from the GPS, the current voice will be covered by it. After the GPS finishing guiding, it will come back to the previous mode. The GPS interface stays.

（2）GPS&video: In audio/radio/TV mode, press GPS button twice on panel /remote control to enter GPS mode. When the GPS finishes voice guiding,it come back to the previous mode.

Note: If the above mentioned modes are not needed, turn it off in the GPS mode.

Mute Button

In standby state, press ‘ 🔇 ’ or MUTE on remote control to turn on/off the mute mode.

Disc Slot

When the disc is inserted into the slot, in DVD mode, the disc will be played automatically.

The disc will not play if not in DVD mode.

Touch Screen Operations

(Pic6-1)

Matching & Connecting

（1）Please build up bluetooth connection between the unit and the cell phone before using the bluetooth function. Touch ‘ PAIR ’ and turn on the bluetooth function in the cellphone to search for device. When the system attains the signal, the name of the device will be shown on the cellphone. When ‘ CXN1450’ is connected,press password （0000）to match with the device. When 'CONNECTED' is shown on the cellphone, the unit has been connected with the cellphone successfully.

（2）In ‘**CONNECT** ’ touch ‘ AUTO ’ or ‘ HAND ’ button to connect. If out of connection, pressthis button to connect again.

（3） ‘**ANSWER**’ Auto-answer. In connected state, the calls will be connected automaticallyafter ringing 3 times.

（4） ‘**BT**’ Press ‘ OFF ’ button, then ‘ PAIR ’ is unavailable. ‘ PAIR ’ button is available only when BT is conected.。

（5） ‘**A2DP** ’ Not available.

3、Touch ‘ ☎ ’ to enter bluetooth calling interface. Pic6-2

（Pic6-2）

Touch Screen Operations

E、Bluetooth Operation Interface (The optional function operation)

1、Touch ‘ ’ to enter bluetooth interface Pic6

(Pic6)

(1) ‘ ’ Touch this button to show the dialing interface.

(2) ‘ ’ Touch this button to show the calls record.

(3) ‘ ’ Touch this button to show the bluetooth setup interface.

(4) ‘ Touch this button to mute.

(5) ‘ / Touch this button to adjust the volume.

(6) ‘ Touch this button to quit bluetooth interface.

(7) ‘ ’ Touch this button to switch between speaker and cellphone.

(8) ‘ ’ Touch this button to hang up/refuse the call.

(9) ‘ ’ Touch this button to deleate the number。

(10) ‘ ’ Touch this button to answer/make a call.

(11) ‘ ’ Shows the incoming/dialed out numbers

(12) ‘ ’ clock diaplay column

2、Touch ‘ ’ to enter bluetooth setup interface. Pic6-1

Key-press Instructions

Numeric Button

In playback mode, press this button on remote control to choose the track.
In bluetooth mode, press this button on remote control to dial the number.

Title Button

1、In DVD playback mode, press ‘Title/Subtitle’ on remote control or ‘Menu’ button on panel for title display.

2、Some VCD and SVCD (especially KARAOKAY) have the menu which allows to select the content. This kind of menu is called PBC.

While playing this kind of disc:

* Press Title to setup the PBC.
* Press the numeric buttons to choose the track.
  When PBC is off, choose the track on remote control through the numeric buttons.
  When PBC is on, you can not choose the track through remote control.

Warning

If it shows PBC MENU is chosen within 10 secretary, the unit will begin to play from the first track.

Pause Button

Pause. Press ‘ ⏯ ’ on remote control to pause. Press it again to continue.

Zoom Button

This button on remote control is for view zooming in function. While playing DVD/VCD, press it to zoom in the view by times according to the pressing times as: X2,X3,X4.

Setup Button

Press this button on remote control for DVD setup.(Please see details in Touch Screen Operations interface 12 DVD）

Direction/Enter Button

Press the direction button to move the cursor to the needed item and press ENTER to choose.

Touch ‘ MENU’ button to enter main menu interface as Pic 1 shows:

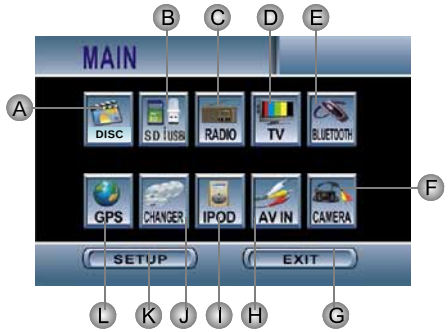

Pic 1

A、 ‘ ’ Press this button to enter DVD playback mode.

B、 ‘ ’ Touch ‘SD’ to enter SD playback mode. Touch ‘USB’ to enter USB playback mode.

C、 ‘ ’ Touch this button to enter radio mode.

D、 ‘ ’ Touch this button to enter TV mode.

E、 ‘ ’ Touch this button to enter bluetooth connecting mode.

F、 ‘ ’ Touch this button to enter rear camera mode.

G、 ‘ ’ Touch this button to quit main menu interface and enter radio interface.

H、 ‘ ’ Touch this button to enter AV in mode.

I、 ‘ ’ Touch this button to enter IPOD mode.(Not available)

J、 ‘ ’ Touch this button to enter changer mode.

K、 ‘ ’ Touch this button to enter setup interface.

L、 ‘ ’ Touch this button to enter GPS interface.(See details in GPS & map user manual)

D.TV Operation Interface Pic5 (The optional function operation)

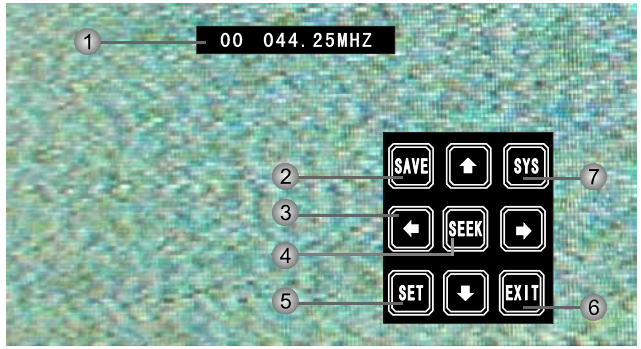

Pic5

1、Frequency Column

2、 ‘ ’ Storage Button。Touch ‘⬅、➡、⬆、⬇’ or ‘◀、▶’ button on remote control, or ‘⏮、⏭’ to choose the frequency. Press ‘SAVE’ buttonor ‘SCAN’ button on remote control to save the stations.

3、Direction button，Touch ‘⬆ ⬇’ or ‘◀、▶’ on remote control to adjust the channel. Touch ‘⬅、➡’ or ‘⏮、⏭’ on remote control to adjust the channel.Press ‘⏮、⏭’ on remote control for over 2 seconds for auto searching.

4、 ‘ ’ Searching button. In TV mode, touch ‘ Search ’ or press ‘SCAN’ button on remote control for over 2 seconds to search for channels from 44.25MHZ-863.25MHZ automatically. Stations will be saved as No.00-49.(At most50 stations)

5、 ‘ ’ Setup button，Touch this button to enter setup interface.

6、 ‘ ’ Quit button. Touch this button to quit TV interface and back to main menu interface.

7、 ‘ ’ PAL/NTSC（not available）

Radio Mode Introduction for Pic4:

1、 ‘ ’ Display column for station Number & frequency.

2、 ‘ ’ Touch this button to search stations down.

3、 ‘ ’ Touch this button on panel to mute.

4、 ‘ ’ Touch this button to search stations up.

5、 ‘ ’ Touch this button to reduce the volume.

6、 ‘SAVE’ Touch this button for auto-search & station storage. Touch it again to stop. Touch it again to back to search and save the stations as No.1-6.FM is saved at most 18 stations as FM1:1-6，FM 2:1-6，FM3 :1-6，AM is saved at most 18 stations as AM1: 1-6，AM2:1-6，AM3:1-6，

7、 ‘BAND’ Band. Touch this button to choose FM1，FM2，FM3，AM1，AM2，AM3。

8、 ‘SEEK’ During searching, the stations can be saved as No.1-6. For example, If you want to save 107.70MHZ in the fourth channel in F1 “1-6”, click on the fourth number and press “SEEK” to save 107.70 MHZ. At this time, 107.70 MHZ has been saved in the fourth channel in F1 “1-6”.

9、 ‘ ’ Press this button to increase the volume.

10、 ‘ ’ Press this button for fine tuning stations down.

11、 ‘ ’ Press this button to quit the radio interface and back to main menu interface.

12、 ‘ ’ Press this button for fine tuning stations up.

13、 ‘ ’ Press this button to choose the stations.

14、Channel display column

15、 ‘ ’ Press this button to choose the stations.

16、 ‘ ’ Clock display column

A、DVD Operation Interface Pic2-1

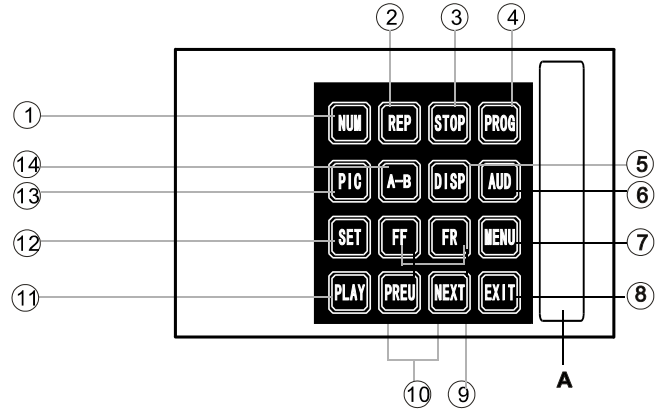

Pic2-1

1、Touch A area on the right side. The operation interface of DVD touch screen will be shown.

（**1**） ‘NUM’ Touch this button and numeric buttons will be shown as follow. Touch these buttons on screen or numeric buttons on remote control to choose the track as Pic2-2 shows.

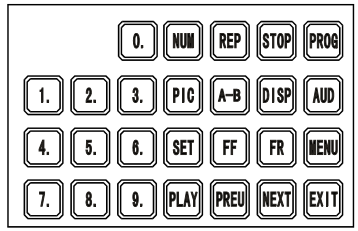

Pic2-2

（**2**） ‘REP’ While playing **VCD**、**CD** disc, touch this button to repeat the track. Touch it again to repeat all. Touch it the third time to quit repeat mode.

While playing DVD disc， touch this button to repeat chapter. Touch it again to repeat title. Touch it the third time to repeat all.
While playing Mp3, touch this button to repeat one track. Touch it again to repeat title.
Touch it the third time to close the repeating mode.
Note: While playing VDC disc, the above functions can only available when PBC is off. Touch MENU button and the note will be shown on the to p right cornner.

（3） ‘ STOP ’ Stop button. Touch this button once, the unit will stop playing. Touch ‘PLAY ’ twice to return to the previous playing memory. Touch ‘STOP ’ twice to stop playing. Touch ‘PLAY ’ twice to play from the right beginning.

（4） ‘ PROG ’ Program button. Touch this button on panel to use program playback function. You can designate at most 20 tracks to the playing list in order.

* The interface is as follow:
DVD、JPEG :

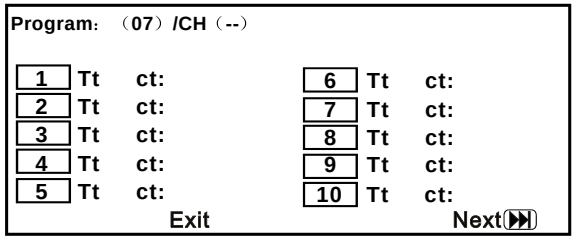

Super VCD、VCD、CD、HD-CD、DTS-CD：

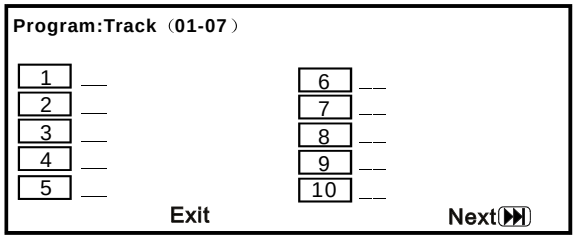

B、USBPlayback

Insert USB to the unit. It will play the contents automatically.
Click in the main menu and touch ‘ ’ to enter USB playback interface.3：

Now touch ‘⏮’ / ‘⏭’ / ‘▲’ / ‘▼’ on remote control to choose the previous/next track. The track can be chosen directly by touching it on panel.

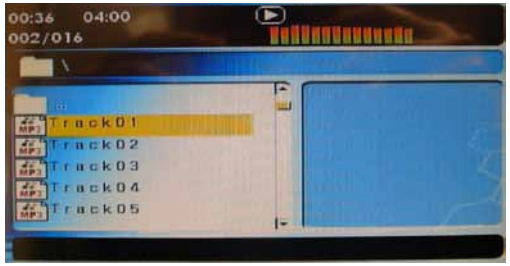

（Pic3）

C、Introduction to Radio Touch Interface

When the unit is on, the monitor will enter the radio default interface as Pic 4 shows.

（Pic4）

*** Password**

Password menu is as follow：

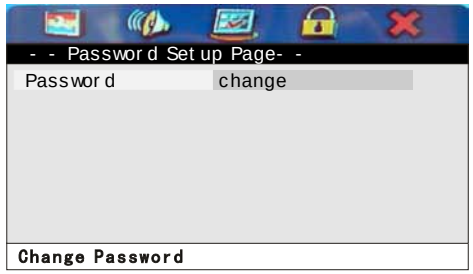

Choose ‘**change**’ to modify thepassword. Press in the old one andthen press in the new one for twice.The cursor will stay on **OK** button once you finish pressing. (A 4-digit number is effective.) The originalpassword is 0000

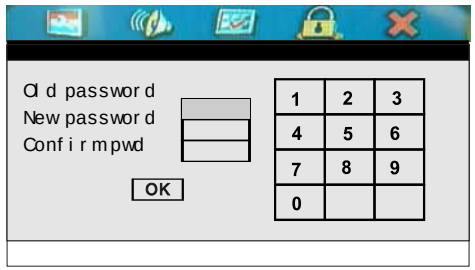

* Touch ‘setup’ button in DVD menu or ‘ ’ to quit setup menu.

(13) Touch ‘ PIC ’ on panel and “waitl capture logo” will be shown on left topcorner.Press"setup" on panel--> “Gonoral Setup Page ” --> “Logo Type” --> “Captured” .The opening view will be replaced by the screen capture.

(14) ‘ A-B ’ Repeat playback button. Fix point repeat（A-B），allows to play between any 2 points. While playing, starting from （A）touch A-B button to，set the starting point（A）. Then set the ending point（B）. After finishing the setting of point（B）, touch A-B button and the unit will repeat playing frompoint A to point B. Press A-B button again to cancel this function.

ˆ If PBC is on, it will be off when program playback is on.
* Press the number following the cursor. Then press Play button or move the cursor to ‘**START**’ for program playback. Please remember that each number should be at least a 2-digit one. For example, if you want to press in the third song, you should press 03.

* Note:
ˆ Move the cursor to '**STOP**' and then press ENTER to clear all the numbers.
ˆ To modify the playback list:Move the cursor to the item and press the new number.
Program playback is not suitable for MP3.

（**5**） ‘ DISP ’ Display button

1.While playing DVD, press this button once to show the title, chapter, playback time. Touch it again to show the title, chapter, rest of playback time. Touch it again to show the title, chapter, chapter playback time. Touch it again to show the title, chapter, rest of chapter playback time.

2. While playing VCD, touch it once to show the track, track playback time. Touch it again to show the track, rest of the track playback time. Touch it again to show the track, playback time of the whole disc. Touch it again to show the track, rest playback time of the whole disc. Touch it again to turn it off.

3. While playing MP3,CD, touch it once to show the single track playback time. Touch it again to show the rest playback time of the single track.

（**6**）Left channel. In playback mode, press ‘ AUD ’ or ‘AMS/AUDIO’ button on remote control to switch.

(7)1、In DVD playback mode, touch ‘ MENU ’ on panel for title menu display function.
2、While reading doc of picture format, press ‘ MENU ’ to view the picture. Press it again to enter the main content of the doc.
3、Some VCD has the menu which allows to choose the content. This kind of menu is also called PBC。
While playing this kind of disc:

* Press title button to setup PBC。
* Press the numeric button to open the segment of the track.
  When PBC is off, press numeric button no remote control to select the track.
  When PBC is on, press numeric button on remote control to select the track.

Warning:
If no operation is executed within 10 secretary after the PBC MENU is displayed, the unit will continue to play from the first track.

（8） ‘EXIT’ Touch this button to quit DVD interface and back to main menu interface.

（9） ‘FF’ In playback mode, press this button on panel or press ‘⏭’ on remotecontrol for over 2 seconds for fast-forward by, X2，X4， X8，X16，X32. Touch it again after X32 to normal mode. In normal mode, touch ‘FR’ on panel or press ‘⏮’ on remote for over 2 seconds for back forward by X2，X4，X8，X16，X32.Touch it again after X32 to normal mode.

（10）Touch ‘PREU’ on panel or ‘⏮’ on remote control for the previous track.

Touch ‘NEXT’ on panel or ‘⏭’ on remote control for the next track.

(11) ‘PLAY’ Pause. Touch this button on panel or ‘⏯’ on remote control to pause. Touch it again to back to playback mode.

(12) Touch ‘SET’ on panel to enter DVD setup interface.

Main process for DVD setup

Press Setup button.
The main menu will be shown as follow:

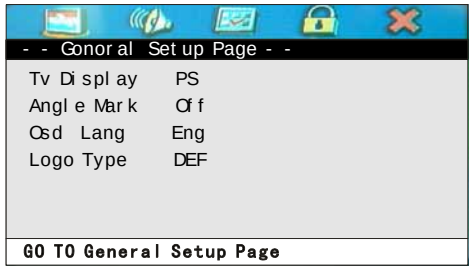

Parental

While playing locked disc, you can choose the parental control rating according to the disc or your need.

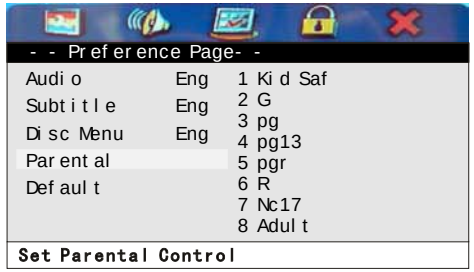

Note:

You can choose the rating only when it is unlocked. The limitation can only make effects in locked state.

1、KID SAFE：Allows to play some titles
2、G：Allows to play titles with at least 2 parental control setting.
3、PG：Allows to play titles with at least 3 parental control setting.
4、PG-13：Allows to play titles with at least 4 parental control setting.
5、PG-R：Allows to play titles with at least 5 parental control setting.
6、R：Allows to play titles with at least 6 parental control setting.
7、NC-17：Allows to play titles with at least 7 parental control setting.
8、Adult：Allows to play titles with at least 1 parental control setting.

Default

Each setting will be back to the original one if have chosen this item..

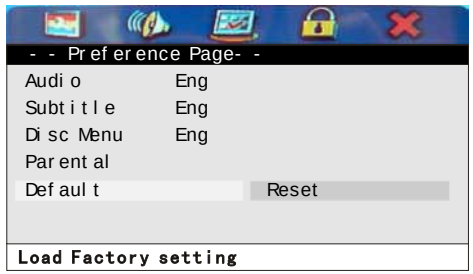

* Touch ‘Setup’ button in DVD menu or ‘✖’ to quit the setup menu.

Audio

For sound options: English, French, Spanish, Italian

Subtitle

Title options: English, French, Spanish, Italian, Portuguese

Disc Menu

Disc language options: English, French, Spanish, Italian

Touch the setting gtoup or （◀/▶/▲/▼）on remote control and prress Enter button to select the item. For example,if to set the Spanish, touch ‘ Preference page’ --> ‘Subtitle’ --> “Spanish”. For remote control, press（▶）to ‘Preference page’, then press（▼）to “Subtitle”, then press（▼）to “Spanish” to choose the needed item.

* Note: Preference page can be enterd only when there is no disc in the unit.

* Touch ‘Setup’ button in DVD menu or ‘ ’ to quit the setup menu.

Introduction to Each Setting

* Gonoral Setup Page

Setting structure is：

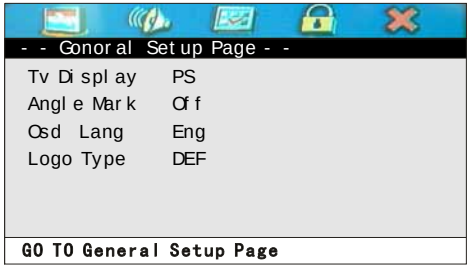

TV Display

3 modes：Normal/Ps Normal/Lb Wide

Angle Mark

There are two options:
on /off

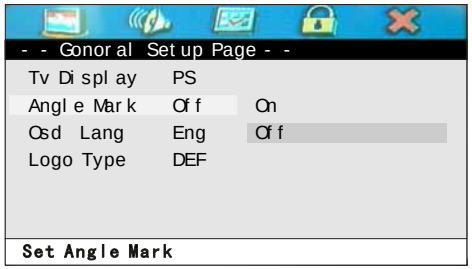

Osd Lang

3 languages can be chosen:
English, Portuguese, Chinese

In OSD lang display, please operate according to the actual unit.

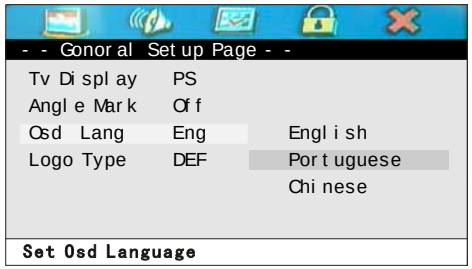

Logo Type

Two kinds of opening:Default
Captured

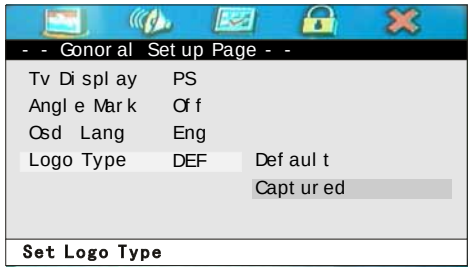

* Touch ‘Setup’ button in DVD menu or ‘ ’ to quit the setup menu.

Touch Screen Operations

Speaker Setup Page

speaker setup page interface is as follow:

DOWNMIX

In DOWNMIX mode, there are 2 kinds of channels: Lt/Rt & Stereo

* Preference page

Interface forPreference pageis as follow:Items are:Audio SubtitleDisc Menu Parental Default(The interface can only be shown when there is no disc in the unit.)

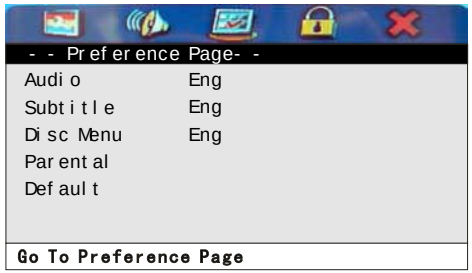

This document was created with Win2PDF available at http://www.daneprairie.com.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.